



Rocky 3.x serial port interface

DB9-3 → Key input

DB9-4 → PDL-C

DB9-6 → PDL-DOT

DB9-8 → PDL-DASH

DB9-7 →

DB9-5 →

Do not connect pin 5 of serial cable to RXTX board to prevent ground loop